


3-3.Using the interior lights

Interior lights list

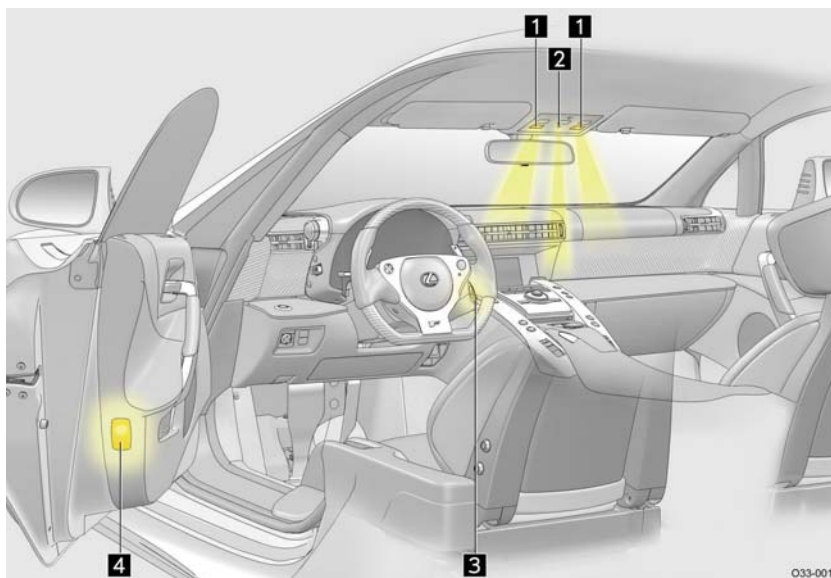

1 Interior lights (→P. 208)

2 Down light

3 Ignition switch light

4 Door courtesy lights

n Illuminated entry system

The lights automatically turn on/off according to the ignition switch position, whether the doors are locked/unlocked, and whether the doors are open/closed.


n To prevent battery discharge

If the interior lights remain on when a door is not fully closed and the interior light switch (door position on/off) is on, the lights will go off automatically after 20 minutes.

n Customization that can be configured at Lexus dealer

Settings (e.g. The time elapsed before lights turn off) can be changed.
(Customizable features →P. 383)

Interior lights

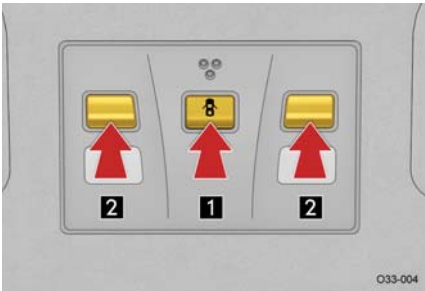

- 1 Door position on/off
- 2 On/off